




Life is Precious.
Be Safe.

Figofix

Group I, II, III (9-36kg)

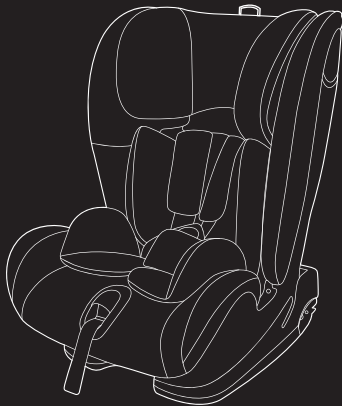

Instruction Manual

The child restraint is approved to UN ECE regulation 44/04.

Please read all the instruction in this manual before installing and using the product



GENERAL SAFETY NOTES

Take the time to carefully read through these instructions, and always keep them ready to hand in the designated pocket on the child seat. For the protection of all vehicle occupants

In the case of an emergency stop or an accident, persons or objects which are not properly secured in the car can cause injury to other vehicle occupants. For this reason, please always check that:

- A:**
- The backrests of the vehicle seats are locked (e.g. that the latch on a folding rear seat bench is engaged).
 - All heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
 - All persons in the vehicle have their seat belts fastened.
 - The child safety seat is always secured in the car via the ISOFIX anchoring, the Top Tether or the 3-point belt (Vehicle belt), even when there is no child in the seat.
- It shall be recommended that the device should be changed when it has been subject to violent stresses in an accident; a general warning shall be given to the user concerning the danger of making any alterations or additions to the device without the approval of the competent authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer;

There shall be explicit warning not to use any load bearing contact points other than those described in the instructions and marked in the child restraint.

For an ISOFIX child restraint system, the instruction for use must be given to read the car manufacturer's handbook it shall be recommended that any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured. It shall be recommended that:

(a) The child restraint must not be used without the cover.

(b) The seat cover should not be replaced with any other than the one recommended by the Manufacturer, because the cover constitutes an integral part of the restraint performance.

If the child restraint offers an alternative load bearing contact point, its use shall be described clearly. The user shall be informed about how to judge if use of this alternative route is satisfactory. The user shall be advised to contact the child restraint manufacturer if in doubt about this point. The user shall be clearly advised to begin the child restraint installation, in vehicle seating positions categorized as "Universal" in the vehicle owner's manual, by using the primary belt route.

There shall be provisions made so that the instructions can be retained on the child restraint for its life period or in the vehicle handbook in the case of built-in restraints.

For the protection of your child

- B:**
- The more snugly the harness fits over your child's body, the safer your child will be.
 - Please do not ever leave your child unattended in the child safety seat in the vehicle.
 - Use on the rear seat: Move the front seat forward far enough that you child's feet cannot hit the backrest of the front seat (to prevent risk of injury).
 - The child safety seat can get hot in direct sunshine.
Caution: Children's skin is delicate and could be injured as a result. Protect the child seat against intensive direct sunlight when it is not currently in use.
 - Only allow your child to enter and exit the vehicle on the pavement side.
 - Make stops during longer journeys to give your child an opportunity to run about and play.
- It shall be recommended that children are not left in their child restraint system unattended; when the chair is not provided with a textile cover, it shall be recommended that the chair should be kept away from sunlight, otherwise it may be too hot for the child's skin;

USE IN THE VEHICLE

*ECE = European Standard for Child Safety Equipment

“only suitable if the approved vehicles are fitted with 3 point with retractor safety-belts, approved the UN/ECE Regulation No.16 or other equivalent standards”

Notice

GROUP I + II + III (9-36KG)ABC installed by means of adult 3-point belt only:

This is a “Universal” child restraint. It is approved to Regulation No.44,04 series of amendments, for general use in vehicles and it will fit most, but not all ,car seats.

A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a “Universal” child restraint for this age group.

This child restraint has been classified as “Universal” under more stringent conditions than those which applied to earlier design which do not carry this notice. If in doubt, consult either the child-restraint manufacturer or the retailer.

GROUP (9-18KG) installed by means of ISOFIX and top tether:

This is an ISOFIX CHILD RESTRAINT SYSTEM. It is approved to Regulation No.44,04 series of amendments for general use in vehicles fitted with ISOFIX anchorages systems.

It will fit vehicles with positions approved as ISOFIX positions(as detailed in the vehicle handbook), depending on the category of the child seat and of the fixture.

The mass group and the ISOFIX size class for which this device is intended is B1,9-18kg.

This child restraint is classified for "Semi-universal" use and is suitable for fixing into the seat positions of the following cars:

<u> </u> CAR	<u> </u> FRONT	<u> </u> REAR
<u> </u> (car list)	<u> </u> Outer	<u> </u> Centre
	<u> </u> Yes	<u> </u> Yes No

Seat positions in other cars may also be suitable to accept this child restraint. If in doubt, consult either the child restraint manufacturer or the retailer.

The test mark E (in a circle) and the certification number are located on the orange certification sticker (sticker on the child safety seat).

- This certification will be invalidated if you make any modifications to the child safety seat.
- child safety seat must only be used to secure your child in the vehicle. It must never be used as a seat or toy in the home.

Risk of injury due to unauthorised modifications!

Unauthorised technical modifications may reduce or entirely void the seat's protective properties.

- Do not make any technical modifications to the child seat.
- Use the child seat only as described in these user instructions.


Important

Before using your child seat, ensure to review and familiarize yourself with the features and functions of the child seat by reference to this user manual.

Follow the instructions to the letter and keep them for future reference. the instruction manual can be stowed in a handy location on the rear of the backrest of the seat.

This child seat has been designed, tested and approved for use in groups 1, 2 and 3, according to the European standard ECE R44/04.

GROUP	CHILD'S WEIGHT	APPROX CHILD'S AGE
1	9 to 18 kg	9 month to 4 years
2	15 to 25 kg	3 to 7 years
3	22 to 36 kg	5 to 12 years

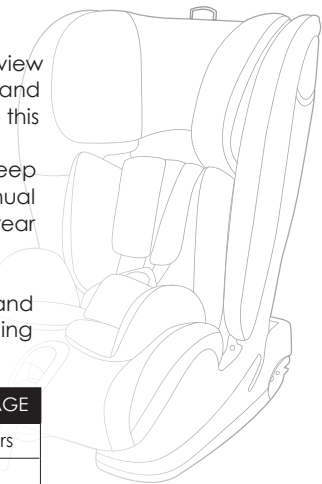

This child seat offers a variety of installation options. The following table indicates the types of installation for respective groups:

GROUP	INSTALLATION METHO	CHILD INSTALLATION
1	isofix+top tether	5 point harness
1	vehicle belt	5point harness
2+3	vehicle 3 point belt+fix	vehicle 3 point belt
2+3	vehicle 3 point belt	vehicle 3 point belt

NOTICE**Groups 1-2-3 (from 9 to 36kg) - securing with a vehicle belt and ISOFIX**

1. This is a "universal" child restraint. It is approved to regulation No. 44 / 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. Only suitable if the approved vehicles are fitted with 3 point safety belts with retractors approved to UN/ECE regulation No. 16 or other equivalent standards.
5. If in doubt, consult with the child restraint manufacturer or the retailer.

Group 1 (from 9 - 18 kg) - securing with the isofix system

1. This is an ISOFIX CHILD RESTRAINT SYSTEM. It is approved to regulation No.44 / 04 series of amendments for general use in vehicles fitted with ISOFIX anchorage systems.
2. It will fit vehicles with positions approved as ISOFIX positions (as detailed in the vehicle handbook), depending on the category of the child seat and of the fixture.
3. The mass group and the ISOFIX size class for which this device is intended is :B1(9-18KG)
4. If in doubt , consult either the child restraint manufacture or retailer.

Group 2 and 3 (from 15 to 36kg) - securing with vehicle belt and fix connectors

1. This child restraint is classified for semi-universal use and is classified for semi-universal use and is suitable for fixing into the seat positions of the cars listed in the fitting list annexed to this manual. Seat positions in other cars may also be suitable to accept this child restraint.
 2. Only suitable if the approved vehicle are fitted with 3 point safety belts with retractors approved to UN/ECE Regulation no. 16 or other equivalent standards.
 3. If in doubt, consult either the child restraint manufacturer or the retailer.
- **Warning: for groups 2 and 3 fixed with the isofix system: always use the points together with the vehicle's safety belt. Do not fix the child seat by means of the isofix attachment points only.**

IMPORTANT INFORMATION

Safety

- **Warning:** for groups 2 and 3 fixed with the isofix system: always use the isofix system together with the vehicle's safety belt. Do not fix the child seat by means of the isofix attachment points only.
- **Warning:** incorrect fitting or use of the child seat may seriously affect the safety of the child.
- **Warning:** check the road traffic regulations in the country where you are travelling. The use of your child seat may be restricted.
- **Follow** precisely the user instructions.
- **Do not** make any changes to the child seat, as this could result to an unsafe situation.
- **Do not** fit any accessories, spare parts or components not supplied or approved by the manufacturer.




- **Install** the child seat so that its rigid items and plastic parts are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- **Do not** leave the child unattended in the child seat.
- **Do not** leave the child seat in the vehicle when the vehicle is parked in the sun: steel and plastic parts of the child seat may become very hot.
- **Make sure** that any luggage or other objects liable to cause injuries in the event of a collision are properly secured. All passengers must wear safety belts.
- **Secure** the child seat to the vehicle seat even when the seat is not in use.
- **Periodically check** the condition of the child seat. Replace the child seat if it shows signs of breakage or wear and tear.
- **Do not** use the child seat if any parts are broken or missing.
- **Use exclusively** manufacturers spare parts. The covers are an integral part of the child seat: the seat **must not** be used without the covers. The covers must only be replaced with manufacturers replacement covers.

In the event of an accident

- All passengers **must know** how to take the child out of the seat.
- **Replace** the child seat after an accident: it may have suffered damage that is not visible on the outside.

Comfort

- When the child seat is used on the rear seat of the vehicle, **make sure** there is enough room for the child's feet. Move the front seat forward slightly if necessary. Take frequent breaks on long journeys so the child has a chance to move about.

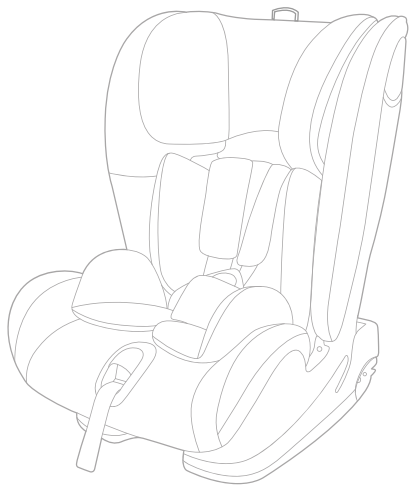


PREPARATORY WORK


Components off the car seat

Identify the components of the child seat before using it.

- 01 Headrest
- 02 Belt guide (groups 2 and 3)
- 03 Harness shoulder pads
- 04 Internal cushion
- 05 5-point harness buckle
- 06 Belt guide (groups 2 and 3)
- 07 Belt guide (group 1)
- 08 Central adjuster
- 09 Crotch pad
- 10 Harness adjuster strap
- 11 Recline handle

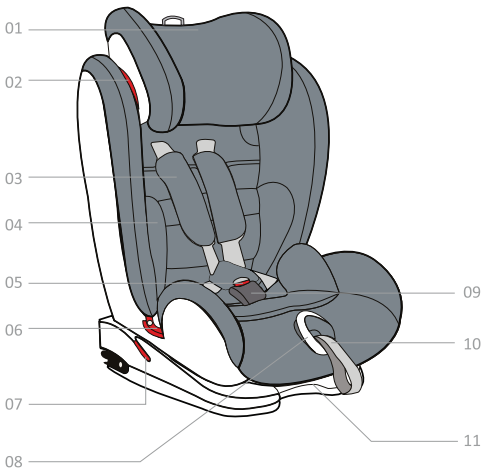


- 12 Headrest height adjusterhandle
(group2+3)
- 13 Top Tether
- 14 Diagonal seat belt
Lock off device (group 1)
- 15 Harness shoulder strap
height adjuster(group 1)
- 16 Connecting piece
- 17 Instruction manual
storage compartment
- 18 Isofix connectors
- 19 Fabric loop
- 20 Isofix unlocking button
with indicators

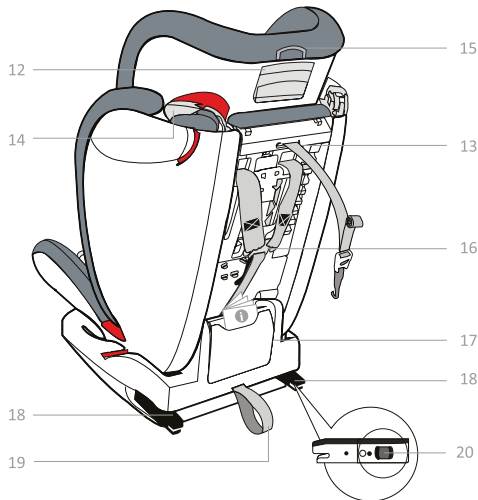

Preparing isofix



Pull the fabric loop found at the rear of the base to pull out both isofix connectors completely.

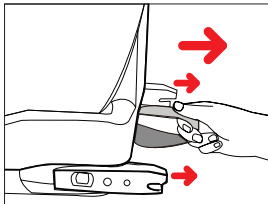**Setting harness and headrest height**



Check and if necessary adjust the height of the shoulder straps and headrest before fitting the child seat in a car.

Place the child seat on the floor and sit the child snugly into the seat.

Check that the straps are adjusted to the closest position to the child's shoulders and preferably position just above the child's shoulders.

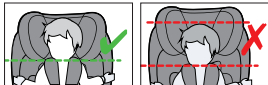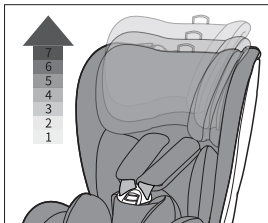


Adjust the height of the headrest so that the child's head is well enclosed. The headrest must be adjusted so that there is a space no more than two fingers wide between the headrest and your child's shoulders.

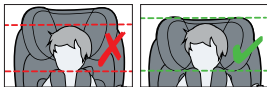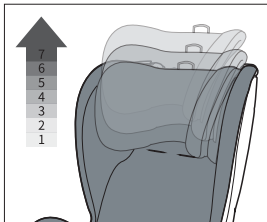

Adjusting the headrest and the harness in 5-point harness installation group 1(9-18kg)

Press the central adjuster and, at the same time, pull both harness shoulder straps to loosen them as much as possible. Do not pull on the shoulder pads.

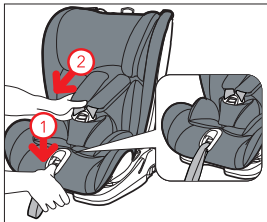

Slide the harness shoulder strap height adjuster to select the correct height of the shoulder belts. Release the harness shoulder strap height adjuster to engage it in the desired position.



Pull the ring-shaped button of the headrest height adjuster at the top of the seat's headrest to select the correct height of the headrest and engage it in the position that fits for your child by releasing the button.

Adjusting the headrest in vehicle belt installation (group 2,3 (9-18KG)).


Remove the 5 point harness as described in the paragraph "removal of the 5-point harness" below.

Press the button on the harness shoulder strap height adjuster at the rear of the seat shell and tilt the harness shoulder strap adjuster towards you.

Slide the harness shoulder strap height adjuster to select the highest possible position.
Release the harness shoulder strap height adjuster to engage it in the desired position.



Squeeze the headrest height adjustment handle on the back of the headrest.
Move the headrest to the desired height.
Release the headrest height adjustment handle to lock the headrest at the desired height.

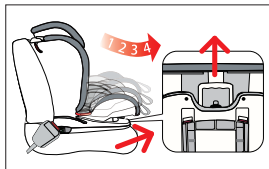

Reclining the seat

Find the recline handle under the front of the child seat shell.



Pull the recline handle and simultaneously move the seat forwards or backwards until achieving the required reclined position.

CAUTION: NO.1-4 reclined position apply to Group 1,
Only No.1 position apply to Group 2,3

USING THE CHILD SEAT

Position the child seat on the vehicle seat giving priority to a rear seat position. Use the front seat position may differ in certain countries. Refer to the highway code of the country where you are travelling.

- **Warning: do not place the child seat on a seat that it only fitted with a 2 point lap belt.**
- **Warning: do not put anything between the child seat and the car seat.**

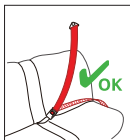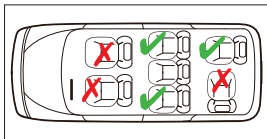


Group 1 with isofix and top tether


If your vehicle is not equipped with isofix insert guides, clip the two insert guides which are included with the seat.



TIP: the isofix attachment points are located between the surface and the backrest of the vehicle seat.

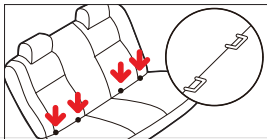


Move the vehicle seats headrest to its highest position.

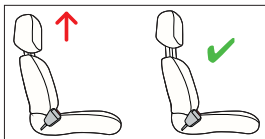


Take the top tether from the storage bag and lay it over the child seat.

Before installing the child car seat identify the location of the top tether anchorage position, usually located on the rear parcel shelf, rear of seat back or floor of the boot.


Place the child seat facing in the direction of travel on the vehicle seat backrest. Pass between the vehicle headrest supports.

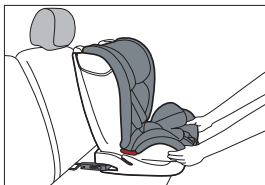

Grasp the child seat with both hands and slide the two locking arms into the insert guides until both ISOFIX connectors engage with a "click" sound on both sides.

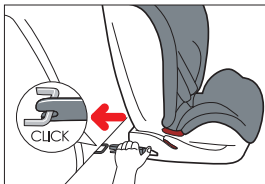


Check that the green safety buttons are visible on both side

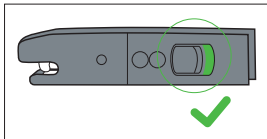


Push the child seat towards the backrest to applying firm, even press on both sides.

Shake the child safety seat to make sure it is safely attached and re-check the green safety buttons to make sure that both of them are completely green.

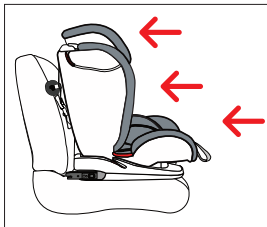

Take the Top Tether and press the metal tongue to loosen and lengthen the strap.



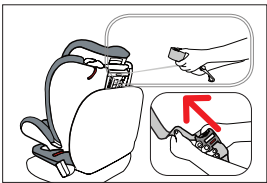


- **Warning:** Hook the snap hook into the Top Tether anchoring point recommended in your vehicle owners guide. Identify the location of the top tether anchorage position, usually located on the rear parcel shelf, rear of the seat back or floor of the boot.

Route the top tether strap under the vehicle seat's headrest.

Hook the snap hook of the Top Tether into the anchoring point and make sure the straps are not twisted.

Pull and tighten the Top Tether until the indicator shows green.

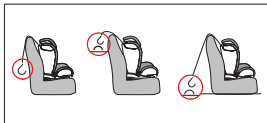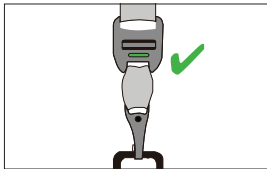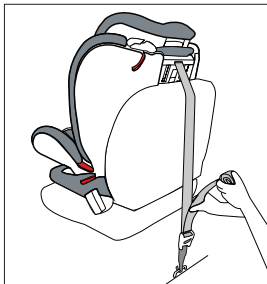

Removing the child seat

To release the child seat from the vehicle, simultaneously pull back the buttons on the connectors on both side of the seat.




Pull seat away from the vehicle seat ISOFIX connection points.

Loosen the top tether strap and release it from the tether anchorage.

Group 1 with vehicle belt

- **Warning:** The vehicle seat belt routing positions are marked in red. Do not route the car seat belt in positions other than those indicated.


Pass the lap section of the vehicle seat belt through the belt guides on the base of the child seat.

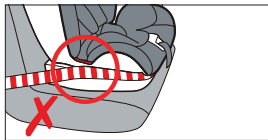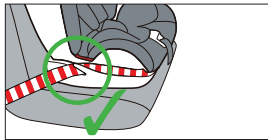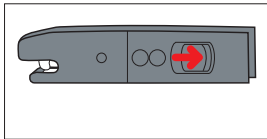


Insert the vehicle seat belt in its buckle to lock it. You shall hear a click.




Open the lock off devices located on the top corners of the car seat.

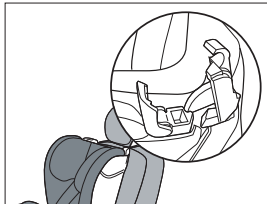

Pass the diagonal belt across the top of the backrest passing it through both belt locks.

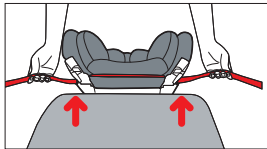


Tension the vehicle seat belt well, check that there are no twists and that it runs smoothly through the belt guides of the child seat.

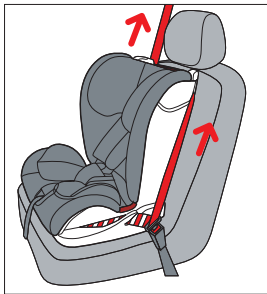


Close the lock off devices.

- **Warning:** check that the straps holding the car seats to the vehicle are tight and not twisted.

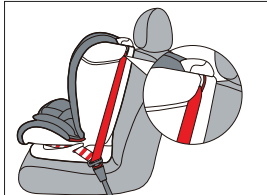


Securing your child with 5-point harness.


Press the red button on the buckle to open it.

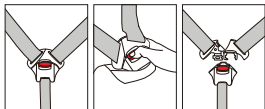


Open the harness and lay them on the sides of the child seat.

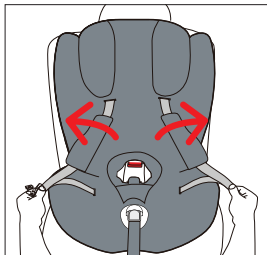

Sit the child in the child seat. Make sure that your child's back lies flat against the backrest of the child seat.

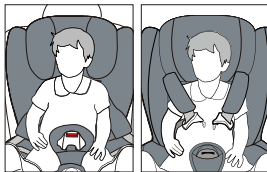

Bring the two buckle tongues together, engage them and insert them into the buckle. A click indicates when the buckle is closed correctly.

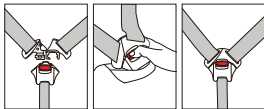


Pull the shoulder pads downwards to position them correctly on the shoulders and chest of the child.




Pull the adjuster strap to tighten the safety harness snugly over the child's body,

- **Warning: During the journey periodically check that the child has not freed itself from the child seat.**
- **Warning: the harness straps must be positioned as low as possible on your child's hip.**

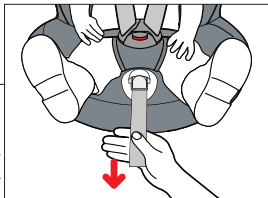


- **Warning:** check that the harness straps restraining the child are not twisted.
- **Warning:** check that the harness straps are adjusted to the child's body.

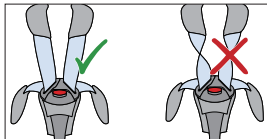


Freeing the child from the seat

Press the central adjuster and, at the same time, pull both shoulder harness to loosen them as much as possible. Do not pull on the shoulder pads.

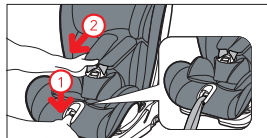

Press the red button on the buckle to open it.

Take off the harness and clear them from the child.

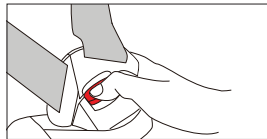

Removing the child seat

Release the vehicle seat belt, unthread it from the child seat and allow it to retract.


- **Warning: secure the child seat with the vehicle belts even when there is no child in it to prevent the child seat to moving around in the vehicle while driving.**

Groups 2 and 3


Removing the 5 point harness

- **Warning: remove the 5 point harness before using the child seat for groups 2 and 3.**


Press the central adjuster and, at the same time, pull both shoulder straps to loosen them as much as possible. Do not pull on the shoulder pads.

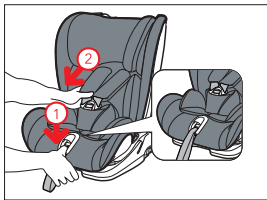


Press the red button on the buckle to open it.

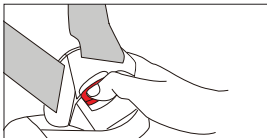



Remove the internal cushion.
Unhook the shoulder straps from the connecting piece on the back side of the child seat.

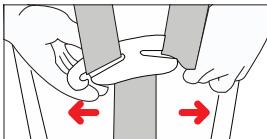


Snap the connecting piece in the instruction manual storage compartment.

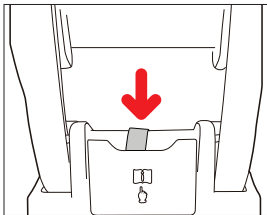


Pull the shoulder straps out of the backrest of the seat, roll them together and place them into the storage compartments.

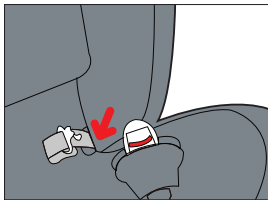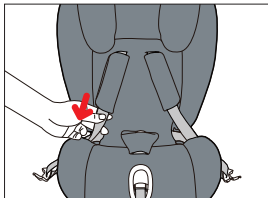


Remove the straps of the shoulder pads from the metal bar on the headrest height adjuster handle.

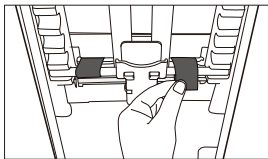


Pull the shoulder pads through the slots to the front.

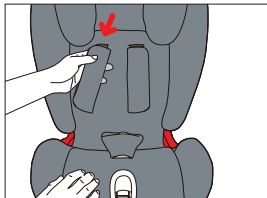

Remove the crotch pad from the buckle. Adjust the backrest angle to the most reclined position.

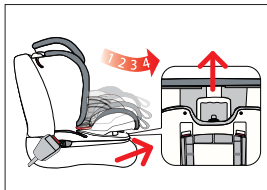

Hold the metal plate of 5-point harness buckle vertically. Pull it out with the narrow side upwards through the belt slot closest to you.

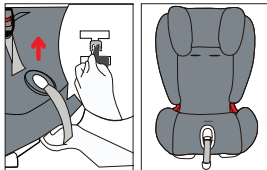

INSTALLING THE CAR SEAT GROUP 2,3(15-36KG) vehicle 3 point belt+fix




Place the child seat facing in the direction of travel on the vehicle seat.

Installation with isofix connectors (optional)


If your vehicle is not equipped with isofix insert guides, clip the two insert guides which are included with the seat.

TIP: the isofix attachment points are located between the surface and the backrest of the vehicle seat.

Grasp the child seat with both hands and slide the two locking arms into the insert guides until both ISOFIX connectors engage with a click sound on both sides.

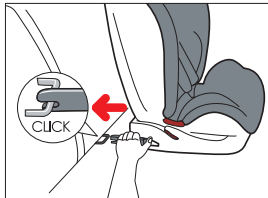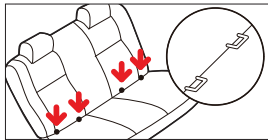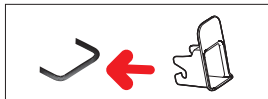

Check that the green safety buttons are visible on both sides.

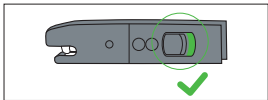


Push the child seat towards the backrest to apply firm, even pressure on both sides.

Shake the child seat to make sure it is safely attached and re-check the green safety buttons to make sure that both of them are completely green.

Have your child sit down in the child seat.

- **Warning: The car seat belt routing positions are marked in red. Do not route the car seat belt in positions other than those indicated.**

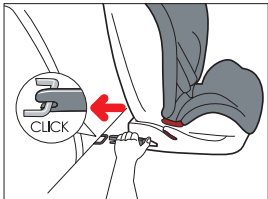


Have your child sit down in the child seat.


Pull out the vehicle seat belt and guide it in front of your child to the vehicle seat buckle. Engage the buckle tongue in the vehicle seat buckle.



Place the diagonal seat belt section and lap belt section in the belt guide on the armrest of the child seat on the side of the vehicle seat belt buckle.

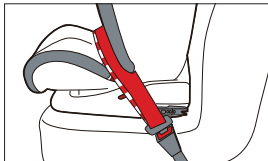

Place the lap belt section on the other side of the child seat in the light red belt guide.

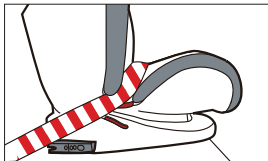

Guide the diagonal seat belt section into the belt guide of the headrest.

Tip: If the backrest conceals the belt guide on the headrest, adjust the headrest upwards. The diagonal seat belt section can now be easily inserted. Now return the headrest to the proper height.

Make sure that the diagonal seat belt section runs over your child's chest and not in front of her or his neck.

Freeing the child from the seat
Release the car seat belt, unthread it from the child seat and allow it to retract.

- **Warning: secure the child seat with the safety belts even when there is no child in it, to prevent the child seat moving around in the vehicle while driving.**




INSTALLING THE CAR SEAT GROUP 2,3(15-36KG) vehicle 3 point belt

Have your child sit down in the child seat.


Pull out the vehicle seat belt and guide it in front of your child to the vehicle seat buckle. Engage the buckle tongue in the vehicle seat buckle.



Place the diagonal seat belt section and lap belt section in the belt guide on the armrest of the child seat on the side of the vehicle seat belt buckle.

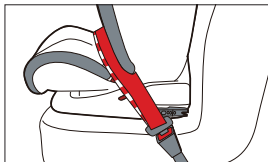

Place the lap belt section on the other side of the child seat in the light red belt guide.

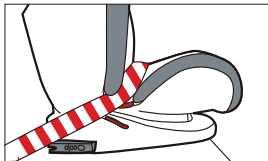

INSTALLING THE CAR SEAT GROUP 2,3(15-36KG) vehicle 3 point belt




Guide the diagonal seat belt section into the belt guide of the headrest.

Tip: If the backrest conceals the belt guide on the headrest, adjust the headrest upwards. The diagonal seat belt section can now be easily inserted. Now return the headrest to the proper height.

Make sure that the diagonal seat belt section runs over your child's chest and not in front of her or his neck.

Freeing the child from the seat
Release the car seat belt, unthread it from the child seat and allow it to retract.

- **Warning: secure the child seat with the safety belts even when there is no child in it, to prevent the child seat moving around in the vehicle while driving.**

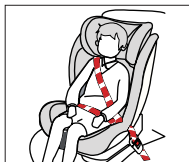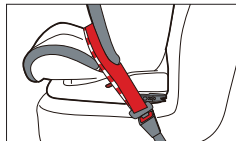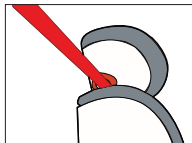

Removing the child seat

To release the Isofix fastening, pull the red button, first on one side, then on the other.


Slide the Isofix locking arms back into the seat shell. Release the car seat belt, unthread it from the child seat and allow it to retract.

Re-fitting the 5 point harness

Prepare the harness straps, the shoulder pads, the buckle and the crotch pad before installation.


Press the button on the shoulder belt height adjuster at the rear of the seat shell and tilt the shoulder belt adjuster towards you.

Slide the shoulder belt height adjuster downwards to adjust the headrest to the lowest position. Release the adjustment handle to lock it in place. Thread both shoulder straps into the shoulder pads. Thread the shoulder straps and the shoulder pads straps together through the harness slots.

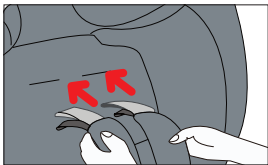

Put the strap loops of the shoulder pads onto the metal bar on the headrest height adjuster handle on the rear of the seat.

CAUTION: The strap loops of the shoulder pads should go through the longer bar of the headrest height adjuster handle.



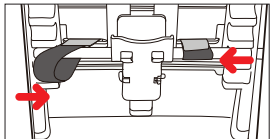


Pull the connecting piece out of the storage compartment.

Hook the shoulder straps onto the connecting piece.

- **Warning: check that the harness straps are not twisted.**

Take the buckle and hold the metal plate vertically. Push it with the narrow side upwards through the belt slot closest to you into the seat shell from above. Put the crotch pad onto the buckle.

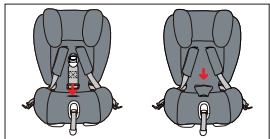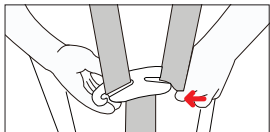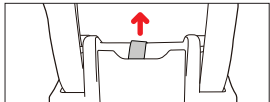

CARE AND MAINTENANCE

Cleaning

Clean plastic parts, the harness straps, the buckle and the anti-slip material of the shoulder pads with a wet cloth.

Do not use harsh cleaning agents. Never use chemical cleaning or bleaching agents.

Cover

Take the covers off completely to wash them.

Follow the washing instructions reported on the label attached to the fabric.

Wash plastic parts using warm water and soap. Do not use aggressive cleaning agents.

- **Warning: The covers are an integral part of the child seat: the seat must not be used without the covers. The covers must only be replaced with manufactures replacement covers.**

For Warranty Registration

Scan QR code for
Online Warranty Registration



Log into

www.koopers.co/warranty-registration/



Life is Precious.
Be Safe.

Koopers Distribution Sdn Bhd

☎ 03-78324338

🌐 www.koopers.co

📘 www.facebook.com/koopersmalaysia

✉ sales@koopers.co

📍 18-1, Jalan Bulan U5/BM, Section U5, Bandar Pinggiran Subang,
40150 Shah Alam, Selangor
Malaysia