

Life is Precious. Be Safe

Koopers Distribution Sdn Bhd

- 03-78324338
- € www.koopers.co
- www.facebook.com/koopersmalaysia
- 18-1, Jalan Bulan U5/BM, Section U5, Bandar Pinggiran Subang, 40150 Shah Alam, Selangor Malaysia





User Manual

For Warranty Registration

Scan QR code for Online Warranty Registration



Log into

www.koopers.co/waranty-registration/

Thank you for trust to our company and products!

For parents:

Welcome to use Koopers baby car seats. Please read user manual carefully before installing.

1. UNIVERSAL 0+ (0-13kg): 3-POINT BELT







NOTICE

- This is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- 2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
 3. This child restraint has been classified as "Universal" under more stringent conditions
- than those which applied to earlier designs which do not carry this notice.
- 4. If in doubt, consult either the child restraint manufacturer or the retailer.
- ▲ Forbid putting children's safety seat in the front row seat with airbag. It might cause serious injury, even death.
- ▲ Important Do not use forward facing installation when body weight is less 9kg (Refer to user manual).
- ▲ Only suitable for use in the listed vehicles fitted 3 point/with retractor safety-belts, approved to ECE Regulation No. 16 or GB14166.

2. UNIVERSAL I (9-18kg): 3-POINT BELT







NOTICE

- This is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- 2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" hild restraint for this age group.
 2. This phild certaint has been also find as "likely acceptanced" under a great actions to capitalize.
- 3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- 4. If in doubt, consult either the child restraint manufacturer or the retailer.

▲ Only suitable for use in the listed vehicles fitted 3 point/with retractor safety-belts, approved to ECE Regulation No. 16 or GB14166.

3. UNIVERSAL II+III (15-36kg): 3-POINT BELT




- 1. This is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- 2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.
- 3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- 4. If in doubt, consult either the child restraint manufacturer or the retailer.

♠ Only suitable for use in the listed vehicles fitted 3 point/with retractor safety-belts, approved to ECE Regulation No. 16 or GB14166.


WARNING

- 1. The steel components and plastic components of safety seat have to be fixed by referring to manual, which ensure safety seat not be stuck by car seats and car doors.
- Any straps holding the restraint to the vehicle should be tight, that any straps restraining the child should be adjusted to the child's body, and that straps should not be twisted.
- 3. Any lap strap is worn low down, so that the pelvis is firmly engaged, shall be stressed
- 4. It can not be used when it has been subject to violent stresses in an accident.
- 5. It's dangerous to make any alterations or additions to the chair without the approval of the Type Approval Authority, and it's a danger of not following closely the installation instructions provided by the child restraint manufacturer.
- 6. The chair should be kept away from sunlight, otherwise it may be too hot for the child's skin.
- 7. Please do not leave your child in their child restraint system unattended.
- 8. Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
- 9. a:The child restraint shall not be used without the cover.
 - b:The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
- 10. The instructions can be retained on the child restraint for its life period.
- 11. Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint.
- 12. The rigid items and plastic parts of a child restraint shall be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- 13. Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured
- 14. Safe driving is the best way to protect children, and children's safety seats can protect children effectively but cannot completely eradicate the harms of car accidents.
- 15. Please be sure to use the right Group of the children's seats with appropriate methods of application, which refer to the instructions manual of child restraint system. Otherwise, there is potential risk to cause child injuries.
- 16. The child safety seat must not be positioned anywhere where it is in range of an airbag which is being deployed, otherwise, once accident happened, airbag can hurt your child.
- 17. If there is mutual interference between the adult safety-belt buckle and the main load bearing contact points on the restraint, it cannot be used. The user shall be advised to contact the child restraint manufacturer if in doubt about this point.
- 18. Don't use forward facing before the child's weight exceeds 9kg.
- 19. Rearward facing can not be installed in the position which is equipped with airbag.
- 20. Keep the instruction for future use.

Know Your CAR Seat (Front)
Know Your CAR Seat (Opposite)
Selection Criteria for Baby Car Seat
Group 0+ Installation
Group I Installation
Group 0+I: 5-Point Harness Installation10
Group 0+I: 5-Point Harness Removal ····································
Group II+III Installation and Using method ······1
Removing the Cover ······15
Cleaning and Maintenance10

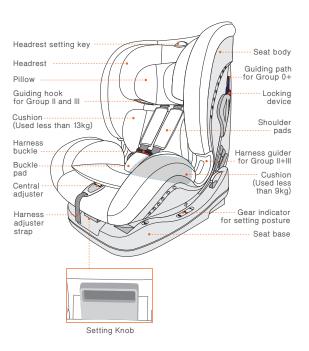

Knowing Your CAR Seat (Opposite)

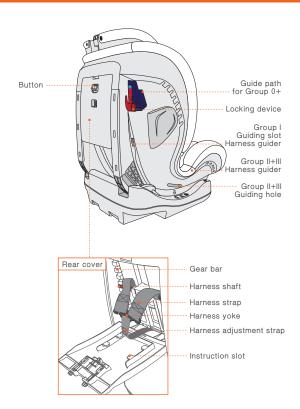

Selection Criteria for Baby Car Seat

- This type baby car seat is applied to Group 0+/I/II/III and the requirement for weight is form 0 to 36kg. It is suitable for around 0 to 12 year-old children. It only can be suitable to use in the listed vehicles fitted 3 point/with retractor safety-belts, approved to ECE Regulation No.16 or GB14166.
- Different installation methods should be applied to children in defferent group.Please follow the below standards to match the right group installation.
- Do not use any load bearing contact points other than those described in the instructions and marked in the child restraint system.
- Baby car seat for Group 0+ can not be installed in position which is equipped with airbag.


Group	Body weight	Age	Children's restraining system	Installation method	Direction of installation	Requirement for vehicles
0+	0-13kg	0-15 months	5-point harness	vehicle's 3-point seat belt	Rearward Facing	The vehicle equipped with 3-point belt, and cannot be used if the vehicle seat is equipped with only 2-point belt.
1	9-18kg	9months- 4years old	5-point harness	vehicle's 3-point seat belt	Forward Facing	The vehicle equipped with 3-point belt, and cannot be used if the vehicle seat is equipped with only 2-point belt.
11+111	15-36kg	4-12 years old	vehicle's 3-point seat belt	vehicle's 3-point seat belt	Forward Facing	The vehicle equipped with 3-point belt, and cannot be used if the vehicle seat is equipped with only 2-point belt.

Only can apply to the vehicle that has ISOFIX anchroages and 3-point safety belts.



Group 0+ Installation 🚕 💥 🙉


- 1. The installation for Group 0+ is rearward facing and is applied to children from 0 to 13kg.
- 2. This car seat for Group 0+ only has one sitting posture and it is level 4.
- 3. Baby car seat for Group 0+ can not be installed in the position which is equipped with airbag.
- 4. Please place the cushion for Group 0+ into the car seat when using rearward facing.
- 5. Important If your child's weight is less than 9kg, you cannot make forward facing installation.

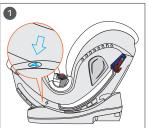



Step 1: As shown in figure 1, push the setting knob and adjust the angle of seat to the level 4.

Step 2: As shown in figure 2, placing the safety car seat rearward in the car seat and make it cling to car seat back.

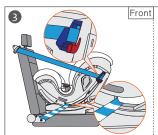



Step 3: As shown in figure 3, the car safety belt passes through the hole of the safety seat according to the blue direction. Put the car safety belt tongue into the car buckle. Pull horizontal car belt tight and place oblique car belt into locking device, then pull belt tight again. Next, put oblique car belt into guiding slot for Group 0+ and put remainder belt into seat belt retractor, Finally, shake the safety seat to ensure whether car seat is already fixed.


Group I Installation



- 1. The installation for Group I is forward facing and is applied to children from 9 to 18kg. 2. This car seat for Group I has three sitting postures and they are level 1/2/3.
- 3. After adjusting, make baby car seat cling to car seat back and strain safety belt.

UNIVERSAL I (9-18kg): 3-POINT BELT



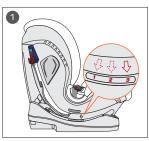




Step 1: As shown in figure 1, push the setting knob and adjust the angle of seat to the right level.

Step 2: As shown in figure 2, place the safety car seat forward in the car seat and make it cling to car seat back.



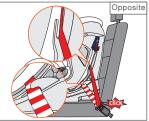


Step 3: As shown in figure 3, the car safety belt passes through the hole of the safety seat according to the red direction. Put the car safety belt tongue into the car buckle. Place horizontal car belt into limit hook tightly and place oblique car belt into Group 1 guiding slot, then pull belt tight again, put remainder belt into seat belt retractor. Finally, shake the safety seat to ensure it is already fixed.

Group 0+I: 5-Point Harness Installation

Step 1: Press the central adjuster and meanwhile, pull out the harness strap to release shoulder belt.



Step 2: Press the red button to open the harness buckle.



Step 3: Pull out both of the shoulder belts to both sides of the child safety seat.



Step 4: Place your child into seat and make sure the lap belt can restrict the position of pelvis. Please check the height of shoulder belts, It is better to make shoulder belts be a little bit higher than child's shoulders.











Methods to use harness buckle: Guide the two buckle latches together and engage them before putting them into the harness buckle, this should make a click nose. The buckle latches will be released if you press the red


Step 5: Pull harness adjustment strap outward to fix child and avoid harness strap to constrict child too much. Adult palm can insert between harness strap and child's chest. Make sure the tightness is comfortable for your child and ensure the lap belt restrict the position of pelvis.

Group 0+I: 5-Point Harness Installation

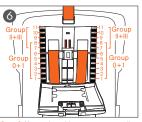



Step 6: Non-rethread harness system adjustable with headrest: according to different height of children, there are 8 levels to adjust the height of headrest and shoulder belt in Group 0+l. There are 5 levels to adjust the height of headrest and shoulder belt in Group II+III. Before adjustment, please loosen 5-point safety belt. Attention: after sitting, adjust the headrest to the right position.

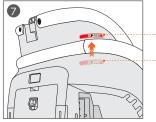

Higher than the base line for the side car seat body

Lower than the base line for the side car seat body

Step 7: If the red line in the side of headrest exceeds the height of side car seat body, you should use Group II+III installation.



Group 0+I: 5-Point Harness Removal



Step 1: Adjust the baby car seat to level 1.




Step 2: Push central adjuster and loosen the belt. Then, adjust headrest to level 3 or level 4 or level 5.



Step 3: Separate the shoulder belt with strap yoke: Put strap yoke into the rear cover and draw out the belt forward.



Step 4: Separate shoulder pads with belt: Draw out shoulder pads firstly, open the shoulder pads and separate shoulder belts with strap yoke, then draw out the shoulder pads.



Step 5: Open harness buckle, put the buckle pad and cushion aside.

Group 0+I: 5-Point Harness Removal



Step 6: Separate harness buckle and car seat (see 1 and 2).



Step 7: Separate the strap with the seat: Separate strap yoke from the seat by hands or small tools. Then draw out the belt and fix the strap yoke with the strap according to picture 1-2-3-4-5.



Step 8: Close the rear cover, finish the removal of the 5-point safety belt like pictures.

Notice





and strap, you must make belts pass the harness shaft.

Group II+III Installation



Removing the Cover

Attentior


- 1. There is only one level for Group II+III and it is first level.
- 2. Before using Group II+III, please remove the 5-point safety belt and cushion.
- 3. Pull the belt in the buckle tightly to make sure buckle in the right position.
- Universal installation and semi-universal installation are equipped with 3-point belt which
 is certified by GB14166 or ECE R16.

UNIVERSAL II+III (15-36kg): 3-POINT BELT









Step 2: As shown in figure 2, place the safety car seat forward in the car seat and make it cling to car seat back.



Step 3: As shown in figure 3, have your child sit on the seat and adjust headrest to the comfortable position. Then make the oblique belt through the guiding hook for Group II and III, horizontal belt through the harness guider, pass through the guiding hole and fix in the slot. Then, insert car belt tongue to car buckle with click sound. Finally, make sure the lap belt can restrict the position of nelvis.

1. Removing the cover of car body




As shown in picture, remove the cover according to the order of 1, 2, 3, 4, 5.


Attention

In the circle 2, take the cover down from the four plastic hooks in the buttom of car seat. When you refit the cover, you also should fix the cover by four plastic hooks.

2. Removing the cover of headrest







Step 2: As shown in figure 2, separate the elastic with the headrest (see point 2). According to point 3, separate elastic with the frame. Then, remove the cover as shown in Arrow 4.

Attention

When you are ready to refit, make the steps in the opposite order.

Cleaning and Maintenance

- Regularly check all important parts for damage. Make sure that the mechanical components in particular are all in perfect working order. If there is damage about your child safety seat in the event of an accident, in this case the safety seat must be replaced.
- Store the child safety seat in a safe, dry place when it will not be used for an extended period of time.
- Brush away loose debris using a soft bristled brush to clean the safety belt and plastic components, and then ventilate or dry them.
- If food or beverage drips on your seat belt, thoroughly rinse it using warm water and then ventilate or dry it.
- Remove and wash the cover see the instructions of cleaning.
- (6) If wash the cover in the fist time, the cover might fade a little bit, It is a normal phenomenon.

Washing Instructions

Do not use solvents, chemical cleaners and lubricants



Hand Wash using the water under 30°C



Do not Bleach



Do not Machine Dry



Do not Iron