



Life is Precious.
Be Safe.

Toby

Group 0+ (Birth-13kg)



Life is Precious.
Be Safe.

Koopers Distribution Sdn Bhd


☎ 03-78324338

🌐 www.koopers.co

📘 www.facebook.com/koopersmalaysia


✉ sales@koopers.co

📍 18-1, Jalan Bulan U5/BM, Section U5, Bandar Pinggiran Subang
40150 Shah Alam, Selangor
Malaysia

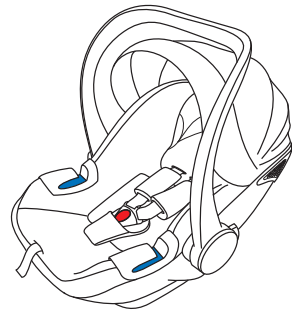


Instruction Manual

HBR-X1 (Without Base)

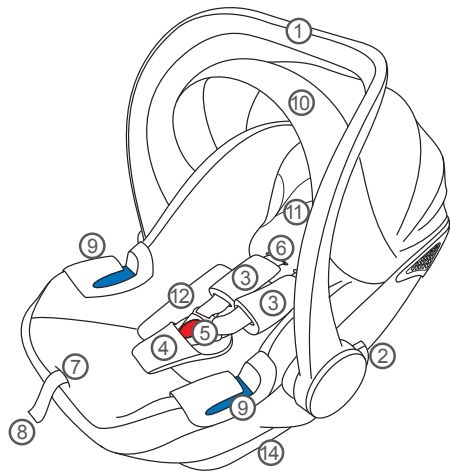



(1)

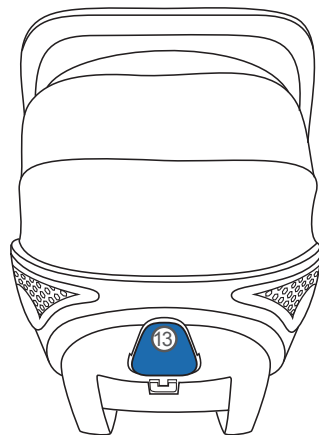


(2)

- 1、 Handle
- 2、 Handle button
- 3、 Shoulder pad
- 4、 Crotch pad
- 5、 Buckle
- 6、 Webbing
- 7、 Center function adjustment
- 8、 Adjustment webbing
- 9、 Side webbing guide
- 10、 Canopy
- 11、 Headrest
- 12、 Inner pad
- 13、 Front webbing guide
- 14、 Carrier shell

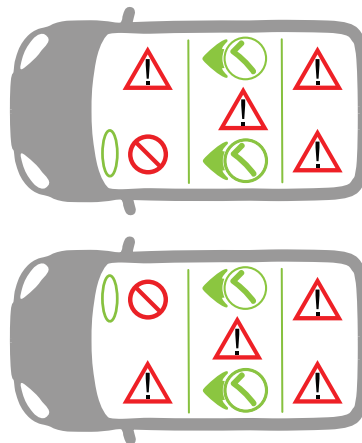


 : Not to use this CRS in seating positions where an active frontal airbag installed.


(3)

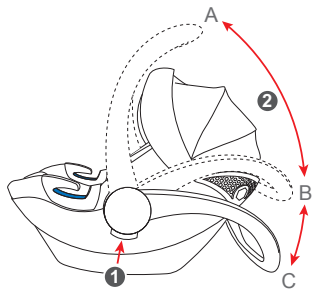


(4)

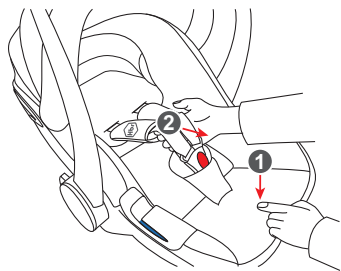


(5)

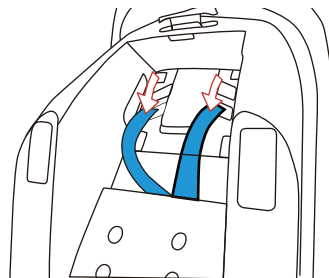


(6)

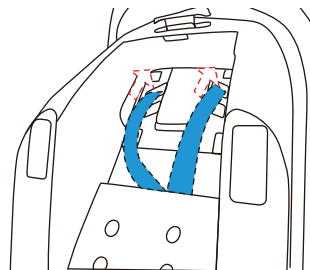


(7)

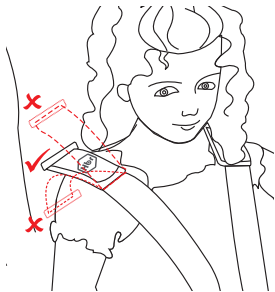


(8)

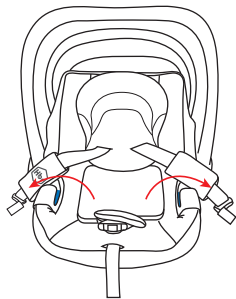


(9)

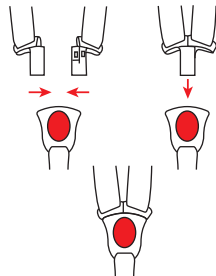


(10)

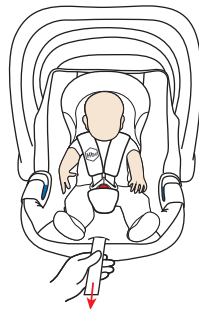


(11)

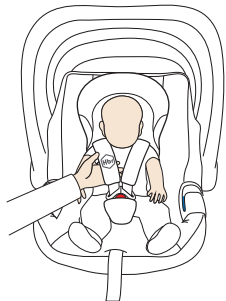


(12)

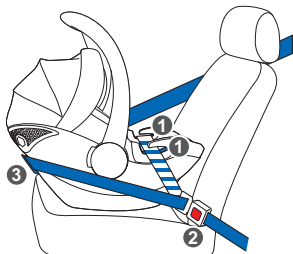

(13)

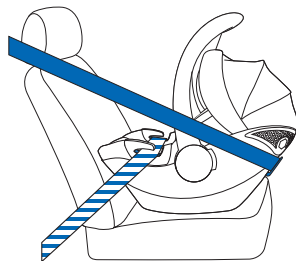


(14)

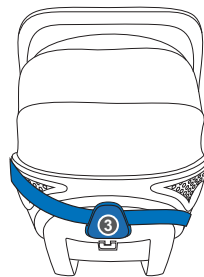


(15)

Attach With Stroller

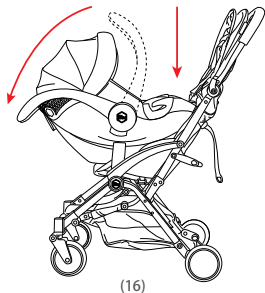

(16)

Release From Stroller

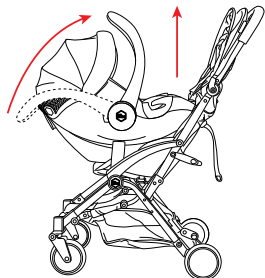

(17)

Notice:

1. This is a "Universal" child restraint. It is approved to Regulation No. 44, 04 series of amendments,

for general use in vehicles and it will fit most, but not all, car seats.

2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a "Universal" child restraint for this age group.

3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.

4. If in doubt, consult either the child restraint manufacturer or the retailer.

Warning:

1. Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

2. The rigid items and plastic parts of a child restraint shall be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle;

3. Not to use them in seating positions where an active frontal airbag installed.

4. Any straps holding the restraint to the vehicle should be tight, that any straps restraining the child should be adjusted to the child's body, and that straps should not be twisted.

5. Ensuring that any lap strap is worn low down, so that the pelvis is firmly engaged, shall be stressed.
6. The device should be changed when it has been subject to violent stresses in an accident.
7. It is dangerous for any alterations or additions to the device without the approval of the Type Approval Authority, and a danger of not following closely the installation instructions provided by the child restraint manufacturer.
8. Children should not be left in their child restraint system unattended.
9. It shall be recommended that any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.
10. The child restraint shall not be used without the cover;
11. The seat cover should not be replaced with any other than the one recommended by the manufacturer, because the cover constitutes an integral part of the restraint performance.
12. Not to use any load bearing contact points other than those described in the instructions and marked in the child restraint.
13. It is dangerous to use the reclined cradle on an elevated surface, e.g. a table;
14. This reclined cradle is not intended for prolonged periods of sleeping.
15. Please stop using the infant car seat after your baby be capable to sit by himself or herself.

16. Take your baby out of the infant car seat as often as possible in order to relieve pressure from his or her spine
17. The infant car seat is not suitable for baby sleeping for long time, please use the baby bed instead.
18. Please contact with distributor or manufacturer to replace or supplement the components if they were damaged or missed.

IMPORTANT!

KEEP FOR FUTURE REFERENCE

Adjustment:

1. To adjust the carrying handle, simultaneously press the left and right buttons(1) of picture4 you can lock the carrying hand in place in 3 positions:
 - A: Vehicle position in the car or carry position outside of the car;
 - B: Cradle position in the desk or lock position attached with stroller;
 - C: Rest position in the desk or the position to put the baby into carrier;
2. Loosen shoulder belts by pressing the adjustment button on central adjuster and simultaneously pulling both shoulder belts up upon picture 5
3. Pull the harness belt from the hole (Picture 6) and insert them to the hole in higher or lower position (Picture 7) to adjust the harness.

Installation in the car(HBR-X1) :

1. Place the infant car seat facing the rear of the vehicle on the vehicle seat. The seat is not suitable for use with a two-pointed or lap seatbelt. Securing with a two-point seatbelt could result in serious or fatal injuries to the child in the event of an accident.

2. Loosen shoulder belts by pressing the adjustment button on central adjuster and simultaneously pulling both shoulder belts up. (Picture 9)

3. Put your child into the child seat, place shoulder belt directly over your child's shoulders and ensure the shoulder belts are not twisted.

Place both buckle tongues together and lock them in place in belt buckle with an audible "CLICK". (Picture 10)

Pull cautiously on central adjustment belt in order to tighten shoulder belts until they fit your baby's body. (picture 11)

4. Unfold the sun canopy by pulling gradually on the plastic cover. To fold up, push the sun canopy back to the start position.

5. Pull out the vehicle seatbelt and route it over the infant car seat. Lock the buckle tongue in place in vehicle seatbelt (picture 13/14/15)

Warning: it may be that buckle part of the car seatbelt is too long so that it reaches the blue belt guides of the infant car seat. this means that the infant car seat cannot be fastened tightly. If this is the case, choose another seat in the car for the infant car seat.

Product Maintenance Record

Distributor:			
Address:			
Product Name		Model	
Order Date		Use duration	
User Name		User Tel	
Problem discription1:			
Problem discription2:			
Problem discription3:			
Solution discription1:			
Solution discription2:			
Solution discription3:			
User signature		Date	
Maintainer signature		Date	